


USER'S MANUAL

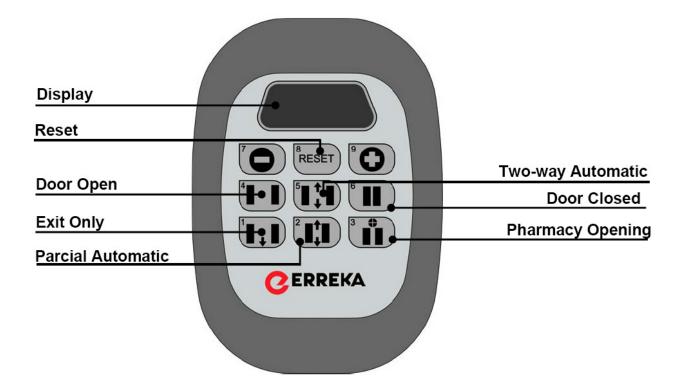



SYMBOL	DESCRIPTION	DISPLAY
	Door Open	OPEn
	The door opens and remains in its maximum open position.	
	Door Closed	
	The door closes and remains closed in this position until the mode is changed. If the electrolock is installed, the door closes and is blocked so that no-one can enter. Two-way Automatic	CLSE
	This is the most common working mode. It allows the door to travel in both directions and	8::-ь
	all detection devices are enabled. <u>Partial Automatic</u>	
	The functioning here is the same as for "two-way Automatic" mode, with the difference that the leaves do not go to maximum open position but instead open partially. This opening is user adjustable. <u>Exit Only</u>	RU-P
	The door only functions in exit direction. In exit direction it works in "two-way Automatic"	EH! E
	mode, and in entry direction its mode is "Door Closed".	<u> </u>
	Pharmacy Opening	8-68
	The electro-lock must be installed for this to function. The door stops in half-open position, with a minimum opening (adjustable), and remains blocked. Reset	
RESET	It is the general reset function, and it is use when in cases of alarm or door is not working properly.	



In case of not achieving a correct performance after resetting Contact the technical support department. 01274426467